



*Two Speed*



## **Casfuy Dog Nail Grinder Tutorial**

*A Reference for the Rest of Us!*

Please read the instructions carefully to familiar Yourself with the grinder before using.

For any assistance or information, request customer service:

Email: [Support@Casfuy.com](mailto:Support@Casfuy.com)

Facebook: [@Casfuy](https://www.facebook.com/Casfuy)

Website: [www.casfuy.com](http://www.casfuy.com)

## **IMPORTANT SAFEGUARDS**

When using an electrical appliance, basic precautions should always be followed, including the following: Read all instructions before using this appliance.

## **READ ALL INSTRUCTIONS AND SAFEGUARDS BEFORE USING**

### **THIS GRINDER.**

### **DANGER**

To reduce the risk of death or injury by electric shock:

1. Do not reach for nail grinder if it has fallen into water. Unplug immediately.
2. This appliance can be used by children aged from 14 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction, by a person responsible for their safety, concerning the use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
3. Do not place or store nail grinder where it can fall or be pulled into a tub or sink. Do not place in or drop into water or other liquid.
4. Always unplug nail grinder from the electrical outlet immediately after using.
5. Unplug nail grinder before cleaning, removing or assembling parts.

### **WARNING**

To reduce the risk of burns, electrical shock or injury to persons:

1. Close supervision is necessary when nail grinder is used by, on or near children or individuals with certain disabilities.
2. Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.
3. Never operate nail grinder if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or dropped into water. Return to an Authorized Service Center for examination or repair.
4. Keep the cord away from heated or sharp surfaces.
5. Never drop or insert any object into any opening.
6. Do not use outdoors or operate where aerosol (spray) or other flammable products are being used or where oxygen is being administered.
7. Do not touch the collet or attachment after use. These may be hot and cause burns to the skin.
8. To disconnect, move the switch to the off, or "O" position, then remove the plug from outlet.
9. Clean the nail grinder's air vents with compressed air on a regular basis. Material may accumulate inside the grinder and cause electrical failure.
10. Always wear safety glasses when using nail grinder. Do not wear loose jewelry or clothing when in use. Keep long hair pulled back out of work area.
11. Do not allow animal to lick or touch the nail grinder during use.
12. To prevent damage to the nail, do not hold the sanding band in one place on nail or apply excessive pressure to the nail while grinding.
13. Make sure attachments are securely in place before use. Before each use, check that the grinder head is sufficiently expanded to secure the grinder head during use. If grinder head is loose during operation, it may be ejected from grinder and cause injury.
14. Do not leave nail grinder unattended when plugged in.
15. WARNING: During use, do not place or leave appliance where it may be (1) damaged by an animal or (2) exposed to the weather.

*NOTE: This appliance is intended for trimming purposes only.*

## Operating Your New Dog Nail Grinder

By following these simple steps, keep your pet's nails trimmed properly for greater comfort and well being

- Before you use the electric dog trimmer, make sure its fully charged
- Turn grinder "ON". The "ON/OFF" switch is located on the front of the grinder. There are 2-speed. When you turn the grinder to the "I" position, the speed control knob should be on Low speed. When you turn the grinder to the "II" position, the speed control knob should be on high speed, you can then turn the speed to the desired low or high speed desired for the nail trim. Usually we suggest that start with the low-speed when using the grinder.
- The grinder bit is outfitted with a well-designed cap, with 2 separate different sized holes. Which makes it suitable for any size of pet nail.
- Please according to the pet's size and characteristics of their nails, choose the suitable port and speed for your pet.

## How to Grind the Dog Nail

- Turn on the grinder, accustom your dog to the sound and smell
- Make sure the dog is relaxed and comfortable.
- Have the dog sit and talk to him/her softly to keep them calm.
- Grasp the foot from the ankle up in the palm of your hand, firmly but gently.
- Position the grinder under the nail.
- Trim off a little of each nail . Be sure to avoid trimming into the 'quick'.
- For best results, start grinding from the bottom of the nail, slowly moving toward the tip. Apply consistent pressure, moving the grinder from side to side of each nail.
- Always include a favorite treat during the session and at the end.




### CAUTION:

- Do not over-grind or apply excessive pressure.
- To avoid tangling of hair on long-haired breed dogs, push hair away from pet's paw before applying the grinder. (Tip: Use a small nylon stocking or sock over the pet's paw and push the nails through a hole at the end to ensure only the nails are exposed.)
- Trim dog nail at right angle. Put the electric nail grinder around the 45 oblique, move the grinder to trim the nail around.
- Remember, only hold the grinder against the nail for a second or two at a time. Press and release in small increments until your dog's nail is shortened.
- For some small or anxiety dogs, you need to take more patience and more time to accustom the dog to the noise, and use low speed only.

## NAIL ANATOMY

Before you begin trimming your pet's nails, you will need to identify the 'quick' of the nail. The diagram (FIG.1) will help you identify the basic nail anatomy. The outer nail is hard and has no nerve endings and protects the inner soft part of the nail, known as the 'quick'.

The quick has nerve endings, tiny blood vessels and is very sensitive should you accidentally cut or grind into it. With lighter colored nails, the quick can usually be seen which will make it easier to avoid while grinding. Please also reference the diagram for the appropriate angle for trimming the nail.

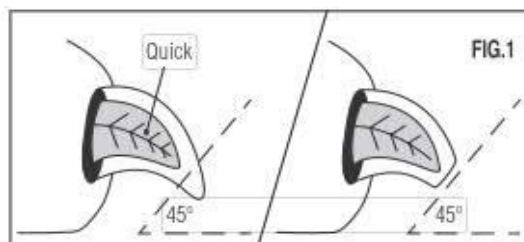

Caution: Dark colored nails may not allow you to see where the quick is. While grinding, keep checking the nail and watch for a dark spot in the middle of the grinding area. This spot will indicate the start of the quick and that you should not grind any further.

## What to do if Accidentally Hit The Quick:

If by chance you happen to hit the quick of a nail and the nail starts to bleed, don't allow your dog to wrench away from you and run around. Hold him firm and reassure him that you know it hurts, your pet trusts you. You also need to get styptic or corn starch onto the end of the nail. Simply keep the original grasp you had on the paw and press the powder to the end of the nail until the bleeding stops. You may have to keep packing powder for two to three minutes, but the longer you are able to apply steady pressure, the more effectively you will stop the bleeding. Don't be concerned if your dog wants to lick the wound after initial bleeding stops. Do keep him from prancing about for at least fifteen minutes. Bleeding should stop within 15 minutes, if the nail is bleeding freely after 30 minutes of applying pressure and powder call your veterinarian.

## Battery Maintenance

- \* If the product is not used for a long time, please charge it once at least every three months.
- \* Product becoming hot during use or charging is normal.

## Caring for the grinder

Follow these steps to prolong the life of the grinder.

- 1: Do not tear down the product at random.
- 2: Do not clean product by water flush and keep the unit away from damp situation.
- 3: Do not use any corrosives such as alcohol, gasoline etc. to clean the surface.
- 4: Avoid being charged above 40 °C or below 0 °C

Email Address: [Support@Casfuy.com](mailto:Support@Casfuy.com)