


Automatic Pet Feeder

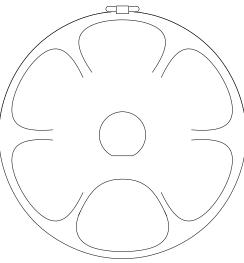

Model: F13-L

- · Please read the manual carefully before using this product.
- If you encounter any issues or need further assistance, please don't hesitate to contact After-Sales for support. ☑ support@casfuy.com ☑ @casfuy

Safety Guide


① Device placement

- 1. The pet feeder should be positioned on a level surface. Do not place or store the appliance where it could fall or be pulled.
- 2. This product is intended for indoor household use only and should be kept away from direct sunlight and wet areas.
- 3. Avoid placing the feeder in temperatures below 0°C.
- 4. Never insert foreign objects into the pet feeder.
- 5. Ensure there are no objects on or around the food bowl to prevent pets from eating properly.


⚠ Important Safety Information

- 1. This product is intended for use with cats and small dogs only.
- 2. Keep small children from playing with, in, or around the pet feeder.
- 3. The filling in the ice pack is not edible. If it becomes damaged, do not use it.
- 4. Avoid submerging the control board in water. The device should never be submerged, as this may damage electronic components.
- 5. Do not disassemble the pet feeder, except for its components.
- 6. Never place or store the appliance in a tub or sink.
- 7. Please prevent the charging port from getting wet. If it becomes wet, make sure it is completely dry before charging.
- 8. The feeder is only compatible with a 5V/1~2A adapter for charging.
- 9. Always unplug the feeder when not in use. If the device is stored for over 6 months, ensure it is fully charged.
- 10. Do not allow pets to chew on or swallow any parts.
- 11. Use the pet feeder only for its intended purpose, which is feeding pets.

Components

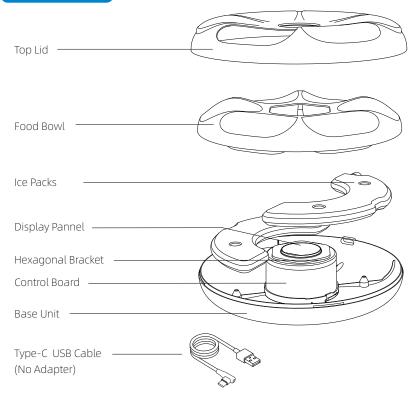

LED display

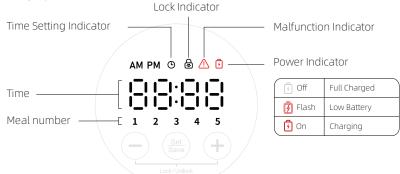

Buttons	Operation		
$\overline{}$	In setting mode, lightly press to decrease a value. In setting mode, long press for quick value adjustments.		
+	In setting mode, lightly press to increase a value. In setting mode, long press for quick value adjustments. In the unlocked status, press and hold for manual feeding.		
(Set Save	In setting mode, lightly press to confirm or proceed to the next step. In setting mode, long press to save changes and exit the setting.		
-+	Press and hold both the \bigcirc and $\textcircled{+}$ buttons simultaneously to lock/unlock them.		
- (Set Save	In the unlocked status, press and hold the — and (and buttons until the machine emits a single "beep", indicating that all meal settings have been cleared.		

Set Up the Pet Feeder

Unlock the Panel

 
Press and hold both the \bigcirc and + buttons simultaneously to unlock the buttons.





Set Current Time

- 1. Press the $\frac{\text{(set)}}{\text{(set)}}$ button to enter the setting mode; the O icon will light up and flash.
- 2. Press the \bigcirc or \bigcirc button to set the current hour, then press the B button to save and proceed to the minutes setting.
- 3. Press the \bigcirc or \bigcirc button to set the minutes, then press the set button to save. The current time setting is complete.



*Note:

1. This feeder operates on a 12-hour format.

2.If there is inactivity for 20 seconds, the feeder will automatically save and exit the setting.

Set the Meal Times

 
Set the time for the first meal

After setting the current time, the feeder will enter the feeding plan setting mode.

The **1** icon will flash, indicating that it's ready for configuring the first meal.

1. Press the (-) or (+) button to set the hour, then press the $(\frac{34}{360})$ button to save and proceed to the minutes setting.

2. Press the - or + button to set the minutes, then press the B button to save. The first meal time is now set, and the meal **2** icon will begin flashing.



Set the times for the other meals

The feeder supports up to 5 scheduled meals per day. Simply repeat the steps above to set the rest according to your pet's needs.

*Note:

1. The feeder does not dispense food at 12:00AM.


2. If your pet doesn't require 5 scheduled meals per day, simply long-press the 😹 button to exit after setting the minutes for any of the 5 plans.

3.Since it has a memory function, it can repeat your scheduled plans. The feeder only shows one if you duplicate feeding plans, the other(s) will be automatically reset to 12:00am.

4. The feeder only displays incomplete feeding plans per day. The meal number icon will disappear once that plan is complete, and light up the next day.

Manually Feed Your Pet

While in the unlocked status, press and hold the \oplus button. The feeder will rotate one slot and dispense a meal.

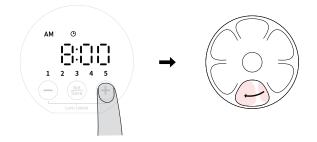

Cancel a Meal

When you want to cancel one of these settings, set it to " $\,$ AM12:00" $\,$, then the feeder won't feed.



Clear All Settings

While in the unlocked status, simultaneously press and hold the \bigcirc and buttons until the machine emits a single 'beep,' indicating that all meal settings have been cleared.



Charge the Feeder

This feeder doesn't include a charging adapter, please ensure using a 5V/1~2A adapter/outlet for charging.



The icon flashes when the device is in low charge.




The icon is on while charging and turns off after being fully charged.

Prepare the Feeder


Remove the Lid

Lay the feeder flat, use one hand to pull up the ring lock, and with the other hand, lift the top lid from the opposite opening.

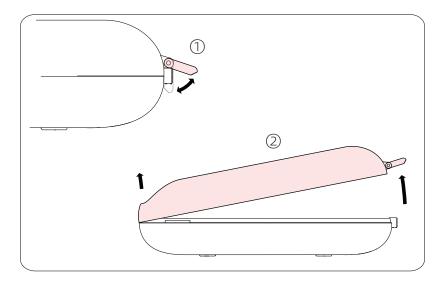

Place the Ice Packs

Take out the ice packs and lay them flat in the freezer at a temperature of -18° C . Allow them to freeze for at least 6 hours before using.

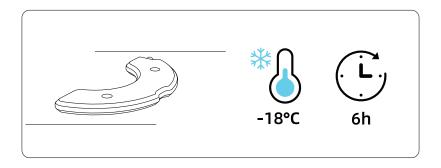

*Note :

1. Ensure that you lay the ice packs flat in the freezer to prevent bulging, which can make them difficult to place under the tray.

2. The ice packs have an effect for 6-8 hours and can keep your cat's wet food cold for up to 24 hours.


3. If you plan to be away for longer than 24 hours, please arrange someone to replace the ice packs and refill the wet food.

4. Please be aware that the effectiveness of the ice packs in preserving freshness may be influenced by environmental conditions.

Fill up Pet Food

1. Align the food bowl with the control board properly. The food bowl rotates clockwise; fill it with pet food accordingly.

2. Before locking the cover, ensure it is sealed completely.

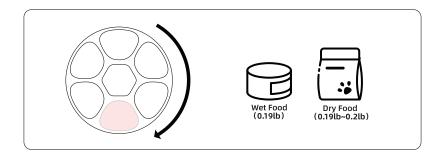

*Note:

1. The opening cannot be programmed with a time. The slot to the right is for the first programmed time.

2. Avoid overfilling the tray to prevent spills that may damage the control board.


Cleaning & Maintenance

The top lid and the food tray are removable and can be washed.

The main board is not waterproof and should not be washed since it contains electronic components. Please keep it away from water.



Clean the base by wiping it with a soft, damp cloth.

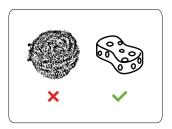

*Note:

After feeding fresh or canned food, it is recommended to wash the food bowl daily.
The food tray and the top lid are designed to withstand temperatures ranging from

-20°C to 70°C. Exposure to high temperatures may cause material deformation.



Fault Symptom	Cause Analysis	How to solve it
Display OFF	No Power	Charge asap
	No Power ON	Turn on the switch on the bottom of the device
	Device Abnormality	Contact after-sales
Unable to Charge	Device Abnormality	Contact after-sales
Misaligned	Main board installed improperly	Check if the main board installed properly
Food Bowl	Device Abnormality	Contact after-sales
E1:	Food bowl is stuck by foreign objects	Clean the foreign matter on the food bowl and feed it manually once
Display	Too much food in the food bowl	Fill the food bowl with the appropriate size and amount of food
E4:	Photoelectric sensor error	Contact after-sales
Display	Device Abnormality	Contact after-sales
E5:LP Display	Low battery	Charge asap



Product Name	6 Meal Pet Feeder
Product Model	F13-L
Dimension	12.6"x12.9"x3.4"
Box Size	14.1"x13.3"x4.5"
Material	Food Grade ABS
NW	2.9lb
Food Appliance	All types pet food
Pets Appliance	Small dogs/ cats
Battery Capacity	3600mAh
Capacity	200ml*6
Charge Voltage	Type-C 5V/1~2A
Rated Power	1W