 




5 Meals Automatic Pet Feeder

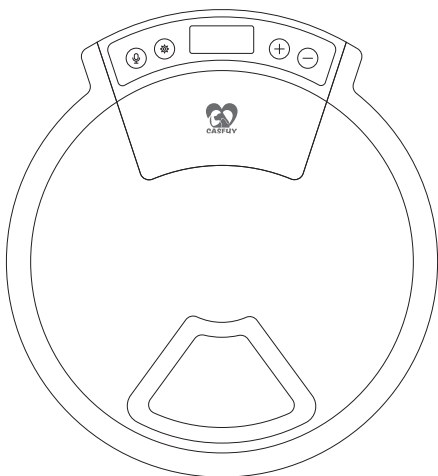

User Guide

Facebook: @Casfuy Email: support@casfuy.com

www.casfuy.com/feeder

Dear Customer:

Thanks for choosing Casfuy 5-meals automatic pet feeder.

This User Guide is intended to provide your pets with a better life.

To have a better user experience, please read all directions before using this product and retain this guide for reference.

If you encounter anything unpleasant, please do not hesitate to contact us and give us a chance to make thing right.

You can contact us in **Facebook: @CASFUY** or **Email: support@casfuy.com**,

We will get back to you in the first time we caught your message and try our best to offer you the best service.

 
Best regards,

Casfuy after-sales service team

Scan this QR code and follow our
Facebook, through which you would get high
quality after-sales services and gifts




Meet Your Automatic Pet Feeder

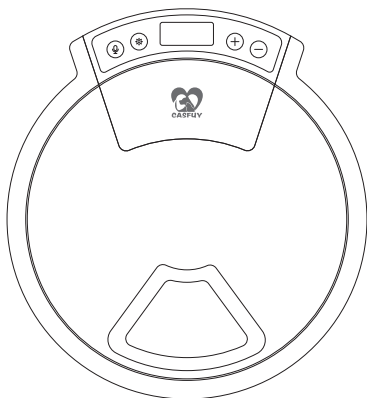

Body





 User Guide

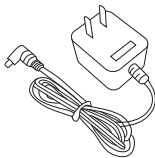


Power Adapter

  Meet Your Automatic Pet Feeder

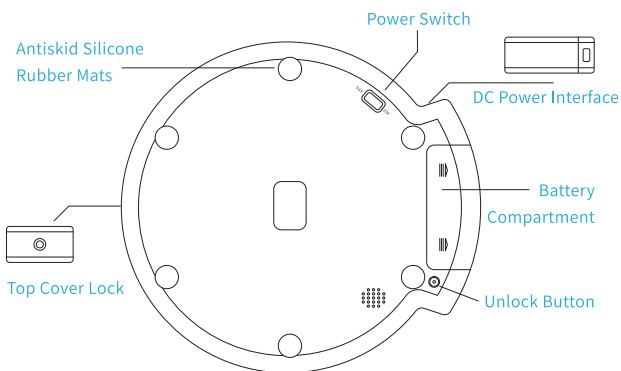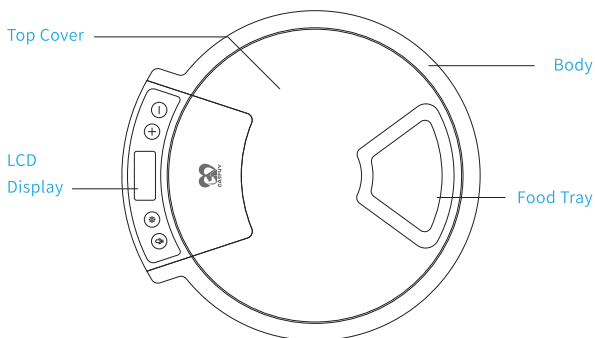

Set Up Your Automatic Pet Feeder

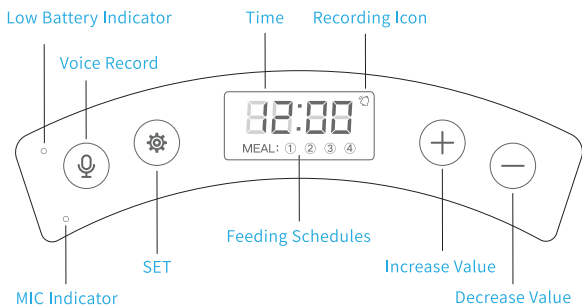 

Test before using:

1. Plug in or install 4* "C" size batteries and switch on, then you can start to set up your automatic pet feeder.
2. Please hold "🔒", "+" buttons at the same time to unlock your control panel.
3. Please long press "+" button for one second to check if the food tray rotates properly.

Set the Current Time:

 
1. Press "🔒". The hour digits will flash.
2. Press "+" or "-" to find the current hour and press "🔒" again to save.
3. Once the hour is saved, the minutes digits will flash.
4. Press "+" or "-" to find the current minute and press "🔒" again to save.



Set Up Your Automatic Pet Feeder

Setting the First Meal Time:

1. Once the time is set, the unit will enter Meal Time Setting Mode. The LCD will display the "⌚" icon and the hour digits will flash.
2. Press the "+" or "-" buttons to find the hour and press "⌚" again to save.
3. Once hour is saved, the minute digits will flash.
4. Press the "+" or "-" buttons to find the minute and press "⌚" again to save.
5. Repeat the steps above to set additional Meal Times (up to 4). After setting, long press "⌚" for 3 seconds to exit setting. If LCD shows how many meals you've set, means a success to meal setting. If you want to cancel one of them, just reset that meal time to "00:00".

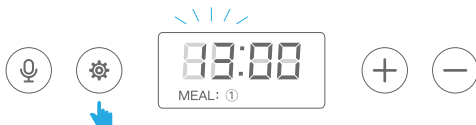

Recording Meal Call for your Pet:

1. Press and hold "🎤" button. Recording Icon will display on the control panel.
2. Speak into the Recording Port (small hole by the MIC Indicator) and record your message (up to 10 seconds).
3. Release the "🎤" button when finished recording. The Recording Icon will go off and the upper right will display "🔊".
4. Press the "🎤" button to listen to the message.
5. If you want to update your voice message, just repeat above steps.



 
Restore Factory Setting:

1. Press "⌚" button, hours digits will flash.
2. Hold down "🎤" button to clean all programmed meals and settings.

Assemble & Disassemble


Install the batteries / adapter:

Remove the battery cover (at the bottom) and install 4* "C" sized batteries properly, or plug in power supply, then turn on the switch at the bottom, and the LCD will be activated, which means the adaptor is working normally.

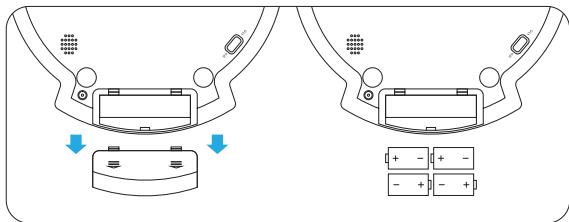

Assemble & Disassemble food tray:

 Press the lock button to remove the cover, the food tray can lift out for easy cleaning. Please put the food tray and rotate properly to keep it stable, install the cover while pressing the lock button.

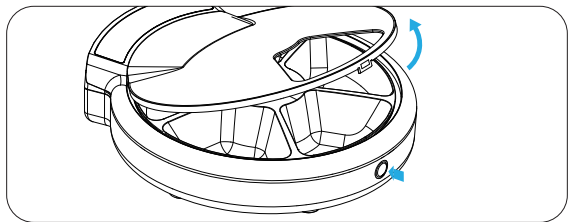

⚠ Cleaning Your Smart Feeder:

1. Please cut off the power and unplug the adapter before cleaning.
2. Clean the unit with a damp cloth rather than a soaked cloth.
3. The food tray can be removed for cleaning.
4. The food tray can be cleaned in the automatic dishwasher.
5. It needs to be wiped clean and completely dry before refilling the food.

FAQ

1. Unlock the Control Panel:

Please hold "⊕" and "⊕" buttons at the same time for 1s to unlock the control panel. The screen will automatically lock within 30 seconds if you do not lock it manually.

2. Instant Feeding:

Please hold "⊕" for 1 second to have an instant feeding.

The food tray will rotate one meal.

If food tray doesn't rotate, please press "⊕" and "⊕" at the same time to unlock the control panel.

3. Low Battery Indicator:

Please replace the battery in time when the low battery indicator flashes.

4. Factory Default Setting:

Unlock the control panel and press "⊕", hour digits will flash, then hold and press "⊕" for 1 second, then, meals and clock icon will disappear, which means all the settings will be deleted.

5. Exit the Current Setting:

Press and hold "⊕" for 1 second to exit time-setting mode and you will be returned to the current time interface.

6.Fill Pet Food:

Fill food into the food tray. Pet food should not be higher than the top cover. And when fill wet food, do not spill it. Please keep the feeder balance after filling food.

7.Feet Protection Design:

To prevent your pets from being hurt by our feeder, we work out the function of feet protection. The feeder will rotate back for 1 second while your pets put their feet in a rotating feeder, and 【E1:99】will show on your screen. Then it will begin to count down and go to 【E1:00】after 99 seconds. The feeder will be in a standby mode and then return normal as soon as the 99 seconds countdown finished.

Abnormal Notifications:

1. Feet Stuck Error: start from【E1:99】then count down to【E1:00】in 99 seconds;
2. Device abnormal: 【E4:--】.

※Please check our official website www.casfuy.com/feeder in time when you find something inconformity of the instruction book.

Important Safety Information

Explanation of Attention Words and Symbols used in this guide



This is the safety alert symbol. It is used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.



WARNING indicates a hazardous situation which if not avoided could result in death or serious injury.

CAUTION

CAUTION used without the safety alert symbol, indicates a hazardous situation which if not avoided could result in harm to your pets.

NOTICE

NOTICE is used to address safe use practices not related to personal injury.



- ★ Do NOT place any foreign object in the pet feeder.
- ★ Do NOT use outdoors. FOR INDOOR HOUSEHOLD USE ONLY.
- ★ Do NOT use an appliance for anything other than its intended use.
- ★ Do NOT allow children to play or around pet feeder.
- ★ Do NOT place anything on top of the pet feeder. The unit starts automatically.
- ★ Do NOT disassemble the pet feeder other than components as instructed in this operating guide.
- ★ Do NOT install or store pet feeder where it will be exposed to weather or temperatures below -20°C.
- ★ Do NOT immerse control panel in water. Base should NOT be submerged in water at any time, as this may damage electronic components.
- ★ Do NOT use this pet feeder with puppies, kittens, dogs or cats not able to reach the food tray or with any physical disability.
- ★ Do NOT operate any appliance if it has a damaged power cord or plug, or if malfunction or has been damaged. Call the Customer Care Center immediately for further instructions.
- ★ Do NOT allow pets to chew on or swallow any parts. If you are concerned about the power cord, purchase a cord conduit (a hard plastic protector) in to protect the power cord.
- ★ Do NOT attempt to repair the pet feeder by yourself.
- ★ Do NOT use pet feeder for anything other than intended use. Using

Important Safety Information

attachments not recommended or sold by the manufacturer may cause an unsafe condition.

- ★ Do NOT lift pet feeder by lid, hopper, bowl or bowl holder. Lift and carry feeder using both hands and hopper base, while keeping unit in upright position.
- ★ If the plug of this device gets wet, turn off the electricity to that wall outlet. Do not attempt to unplug.
- ★ Examine this appliance after installation. Do not plug in if there is water on the Power Cord or plug.
- ★ To reduce the risk of injury, close supervision is necessary when an appliance is used by or near children.
- ★ If using power cord, do not place power cord or plug in water or other liquids.
- ★ Dispose of all packaging materials properly. Some items may be packed in polybags; these bags could cause suffocation; keep away from children and pets.
- ★ For a portable appliance - To reduce the risk of electrical shock, do not place or store the feeder where it can fall easily.

CAUTION

- ★ Intended for dogs or cats only.
- ★ Pet feeder should be placed on a level surface.
- ★ Always unplug any appliance when not in use, before putting on or taking off parts and before cleaning. Never pull on the electrical power cord to remove the plug from the wall outlet.

NOTICE

- ★ Alarm indicator will flash in low battery to remind users to replace batteries or plug in adaptor.
- ★ Read and observe all important notices listed on the pet feeder and in the packaging.

SAVE THESE INSTRUCTIONS